## Guide of install cccam plugin in openatv image of Zgemma

- 1. download softcam-feed-universal\_2.0\_all.ipk file from internet
- 2. copy file to your USB stick root catalog
- 3. open your box ready and insert usb stick to your box usb jack
- 4. select file and install like below



select softcam-feed-universal\_2.0\_all.ipk press ok key and then press green key



here you can see the plugin have installed

5. press exit key twice go to main menu



6. press menu key select plugins press ok key

	Edit mode on
	Info Panel Information
	Timers
	Plugins
	Setup
	Standby / Restart
Wednesday 3:23	
N 4 ·	
Main menu	
7. press green key to download plugins	
Plugin browser	<sup>ay</sup> 3:25
Enhanced Movie Center (Setup)	
RIMBUCS HIND Setup Settings for Internet Movie Database searches	
Mella 🚱 Media player Play back media files	
Media scanner Scanter Scattes	
Multi-Iranscooling Setup Multi device transcooling setup	
OpenNVctraction tool for MetrixHD	
OpenWebif Configuration           OpenWebif Configuration           Picture player	
(PIC PLAYER) Tileformats (BMP, PNG, JPG, GIF)	
Remove plugins Download plugins	MENU EXIT
	a mode of the

8. untill display below photo select softcams press ok key



9. here you can select cccam2.3.2 to install or install other softcam



10. confirm to install softcam

? Do	ownload plugins	Apr.	
	Do you really want to download the p	lugin "softcams-cccam"?	
yes			87
no			

- 11. press ok key then the plugin will install fast
- 12. press exit key three times go to exit
- 13. press blue key to active softcam

Exit Start/ct	System Into	Devices	
Software Manager Update/Backup/Restor Softcam Start/stop/select cam System System System Setup Setup Vulcal netwo W Setup Vulcal netwo Setup Vulca/Audio W Tuner Setup Setup Fugins Setup Fugins Setup Pugins Setup Pugins Setup Pugins Setup Pugins Setup Pugins Setup Pugins Setup Pugins Setup Pugins Setup Pugins	rk	Softcam Panel Control your Softcams Softcam-Panel Setup Softcam-Panel Setup Download Softcams Download and install cam	
Quick Laur	o select soft	Venu cam panel press ok key	

Exit	System Info D	evices	
Use the Softcam Pa	anel to control your Cam.	This let you start/stop,	/select a cam
<ul> <li>Software Manager Update/Backup/Restore y</li> <li>Softcam Start/stop/select cam</li> <li>System System Setup</li> <li>Mounts Mountsetup</li> <li>Mounts Setup y</li> <li>Network Setup your local network</li> <li>AV Setup Setup Video/Audio</li> <li>W Sup Tuner Setup Setup Plugins Setup Plugins</li> <li>Plugins Setup Plugins</li> <li>Harddisk Harddisk Setup</li> </ul>	our box Sic D	oftcam Panel Introl your Softcams Oftcam-Panel Setup Intram-Panel Setup ownload Softcams ownload and install cam	
<ol> <li>select cam1 press → key display</li> </ol>	y cccam_2.3.2		
Softcam Panel V2.0	Tuesday 8. May.	4:47	
Select Cam 1		CCcam_2.3.2	
no CAM 1 active			$\bigcirc$
No ECM info		PEN	Gr
Stop Start Refre	sh		OK EXIT

15. press green key to active cccam

Softcam Panel V2.0 Select Cam 1 active CAM 1: CCcam_2.3.2 No ECM info	Softcam Panel V2.0 B May 4:48 Select Cam 1 Cccam_2.3.2 active CAM 1: CCcam_2.3.2 No ECM info	Softcam Panel V2.0 Select Cam 1 active CAM 1: CCcam_2.3.2 No ECM info	Softcam Panel V2.0 Select Cam 1 active CAM 1: CCcam_2.3.2 No ECM info		i Warning (4) Starting Cam 1: CCcam_2.3.2	ATTU 6.7
Select Cam 1 CCcam_2.3.2 active CAM 1: CCcam_2.3.2 No ECM info	Select Cam 1 CCcam_2.3.2 active CAM 1: CCcam_2.3.2 No ECM info	Select Cam 1 CCcam_2.3.2 active CAM 1: CCcam_2.3.2 No ECM info	Select Cam 1 CCcam_2.3.2 active CAM 1: CCcam_2.3.2 No ECM info	Softcam Panel V/2 0	Tuesday 4.48	
active CAM 1: CCcam_2.3.2	active CAM 1: CCcam_2.3.2	active CAM 1: CCcam_2.3.2 No ECM info	active CAM 1: CCcam_2.3.2 No ECM info	Select Cam 1	CCcam_2.3.2	
No ECM info	No ECM info	No ECM info	No ECM info	active CAM 1: CCcam_2.3.2		
	6.7	G.7	OK EXII	No ECM info	REN.	

- 16. then you can config your account
- 17. press yellow key you can see the cccam info

CCcam Info	Tuesday 8 May. 4:50	
0 General		
(1) Clients		
<li>Active clients</li>		
3 Servers		
4 Shares		
5 Share View	12-	
6 Extended Shares		
Providers		
Entitlements		6 -
(9) ecm.info		
Menu config		
Local box		
Remote box		
Free memory		
		OK EXIT
		OK EAT

## 18. edit your account file your account file is here

	<b>(</b> II		•	Z	$\bigcirc$			
🎦 🚖 🔗 🕛	/usr/key	s/						
名称		~				大小	修改时间	属性
1 上级目录								
CCcam.cfg						37 KB	2018/3/3 18:25:00	-rwxrw-rw-

you can use dcc or other ftp tool to see

## 19. edit file refrence

C: <Hostname> <Port> <Username> <Passwort> <Keyfile des Freundes mit benutzen> ( { caid:id(:uphops), caid:id(:uphops), ... } ))
Bemerkung: Wenn {} Begrenzungen gesetzt werden, kann <Keyfile des Freundes erwünscht> nicht weggelassen werden.
Es muss dann yes oder no angegeben werden!
Beispiele:
C: serverl.dyndns.org 12000 user1 pass1
Verbindet zu einem CCcam-Server ohne den Emu des Servers mit zu benutzen.
C: 192.168.1.2 12000 user2 pass2 yes
Verbindet zu einem CCcam-Server und der Emu des Servers wird mit benutzt. (sofern vom Server erlaubt)

20. after your edit your account then save it and restart your box(note:don't power off your box) the share program will come